

Door Locks

n Locking the vehicle from inside



► Inside lock button

- 1 Locks
- 2 Unlocks



► Door lock switch

Operates all door locks.

- 1 Locks
- 2 Unlocks

n Locking the vehicle from outside

Using the entry function or wireless remote control (→P.9, 10)

n Rear door child-protector lock



Pushing down the switch prevents the rear doors from being opened from the inside.

Always set the child protector locks when children are seated in the rear seat.

Power Windows



1 Power window switches

To open: press the switch.

To close: pull the switch up.

Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

2 Window lock switch

The window lock switch disables the operation of passenger window switches.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving


Driving Comfort

Opening and Closing

What to do if ...

Moon Roof (If Equipped)

n Opening and closing

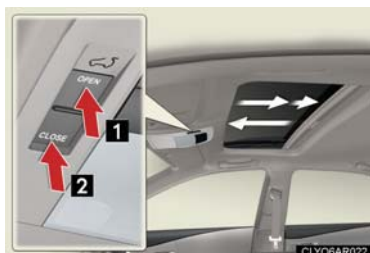

1 Opens


The moon roof stops slightly before the fully opened position.

To fully open, press the switch again.

2 Closes

To stop partway, press the switch lightly.

n Tilt up and down

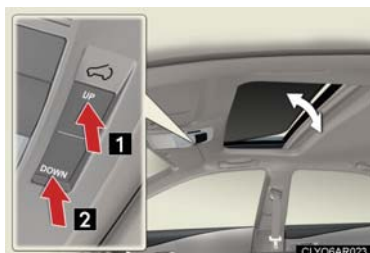

1 Tilts up

2 Tilts down

To stop partway, press the switch lightly.

Fuel Tank Cap



- 1 Press the fuel filler door opener.



- 2 Slowly remove the cap by turning it counter-clockwise.
After the cap is removed, it can be hung on the inside of the fuel filler door.

Hood



- 1 Pull the hood release lever.



- 2 Insert your fingers under the hood, pull the hood catch and lift the hood.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Back Door

n Back door opener button



To open the back door, push up the opener button and raise the door.

n Power back door switches (with power back door)



► Instrument panel

To open or close the back door, press the switch.



► Back door


To close the back door, press the switch.

► Wireless remote control (with power back door) (→P.9)

n Back door closer

If the back door is left slightly open, it will close automatically.

n Turning the power back door system on and off (with power back door)

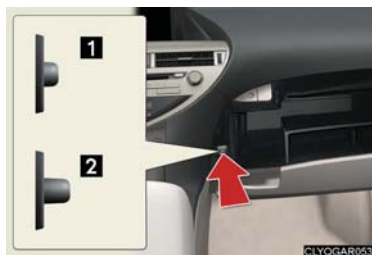

To disable the system, turn off the main switch in the glove box.

1 ON

2 OFF

When the power back door system is disabled, the back door cannot be opened using the wireless remote control or power back door switch.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...